


The balanced audio cable needs to go to the appropriate mic input

SPECIAL OPTIONS FOR EXTENDER MODULES 1 - 6 (PCB AIRENCE-1)

PCB Location	JUMPERS	DEFAULT	DESCRIPTION
	J15 J11 J18	Faderstart Mic Remote	These 3 jumpers change the standard remote jack on the back of the extender unit from Fader Start control jack into Studio (Mic) Remote jack. The default setting is Fader start. When all three jumpers are jumpered to the right then the remote jack can be connected to an optional Studio Remote unit.