

# AIRLITE

## QUICK START MANUAL FOR AIRLITE MK2

---

### **Before you begin:**

- **Download the user manual:**  
Visit [www.dnrbroadcast.com](http://www.dnrbroadcast.com), click the **Support** button on the homepage, and select **Brochures / Manuals / Software**. Download the Airlite MK2 User Manual and read it at least once.
  - **Safety reminder:**  
Turn **OFF** both the Airlite MK2 and other equipment before connecting them to avoid grounding issues that may damage input circuits.  
Power up the equipment in the following order:
    1. Turn **ON** the Airlite MK2.
    2. Turn **ON** the connected equipment.
  - **Maintenance tips:**
    - Clean the front panel periodically.
    - Avoid smoking, eating, or drinking near the console.
- 

## **1. Setting up your Airlite MK2**

### **Step 1: Download necessary software**

1. Visit [www.dnrbroadcast.com](http://www.dnrbroadcast.com).
    - Click **Support** and select **Service Information / FAQ's**.
    - Navigate to the Airlite MK2 product page and download:
      - Control Software
      - Meters Software
      - Firmware
  2. **Install the software**
    - Double-click the downloaded .exe files and follow on-screen instructions.
  3. **Update firmware**
    - Use the **D&R Firmware Update Tool** to install the firmware.
    - Detailed instructions are in Chapter 1.5 of the User Manual.
  4. **Other software**
    - For **Airlite Configuration Manager** and **Airlite VoIP**, see Chapters 1.3 and 1.4 of the User Manual.
    - Step-by-step guides are available on Pages 32 and 41.
-

# AIRLITE

## QUICK START MANUAL FOR AIRLITE MK2

### 2. Configuring USB modules

The Airlite MK2 offers **5 USB audio signals** through its USB connectors:

- **USB-1:** Main program signal
- **USB-2:** AUX output signal
- **USB-3:** Voice track signal
- **USB-4:** (Off) AIR signal
- **USB-5:** VoIP signal (dedicated USB connector)

#### Important notes:

- To monitor levels, use an audio application on your PC or the free test tool available on: <https://www.darkwooddesigns.co.uk/pc2/testgen.html>
  - Adjust the return USB signal levels using the **Gain controls** on the Airlite modules.
  - Routing of incoming USB signals to channels 4, 5, 6, and 7 is done automatically by Windows.
- 

### 3. Setting up VoIP

The Airlite MK2 includes a built-in VoIP interface for Internet communication (e.g., Skype).

#### To Set Up:

1. **Download Skype:**  
Visit [www.skype.com](http://www.skype.com) and select the version for your language.
  2. **Connect VoIP USB:**  
Use the dedicated VoIP USB connector to link the Airlite MK2 to the PC running Skype.
  3. **Skype configuration:**  
Configure Skype software to integrate with your console. Follow specific settings outlined in the User Manual.
- 

#### Additional resources

- **For detailed instructions:**  
Download the full User Manual at [www.dnrbroadcast.com](http://www.dnrbroadcast.com) by selecting **Support > Brochures / Manuals / Software**.
  - **For FAQs and troubleshooting:**  
Visit **Support > Service Information / FAQ's** on our website.
-